


200 AMP CUSTOMER-OWNED UNDERGROUND SERVICE ENTRANCE REQUIREMENTS

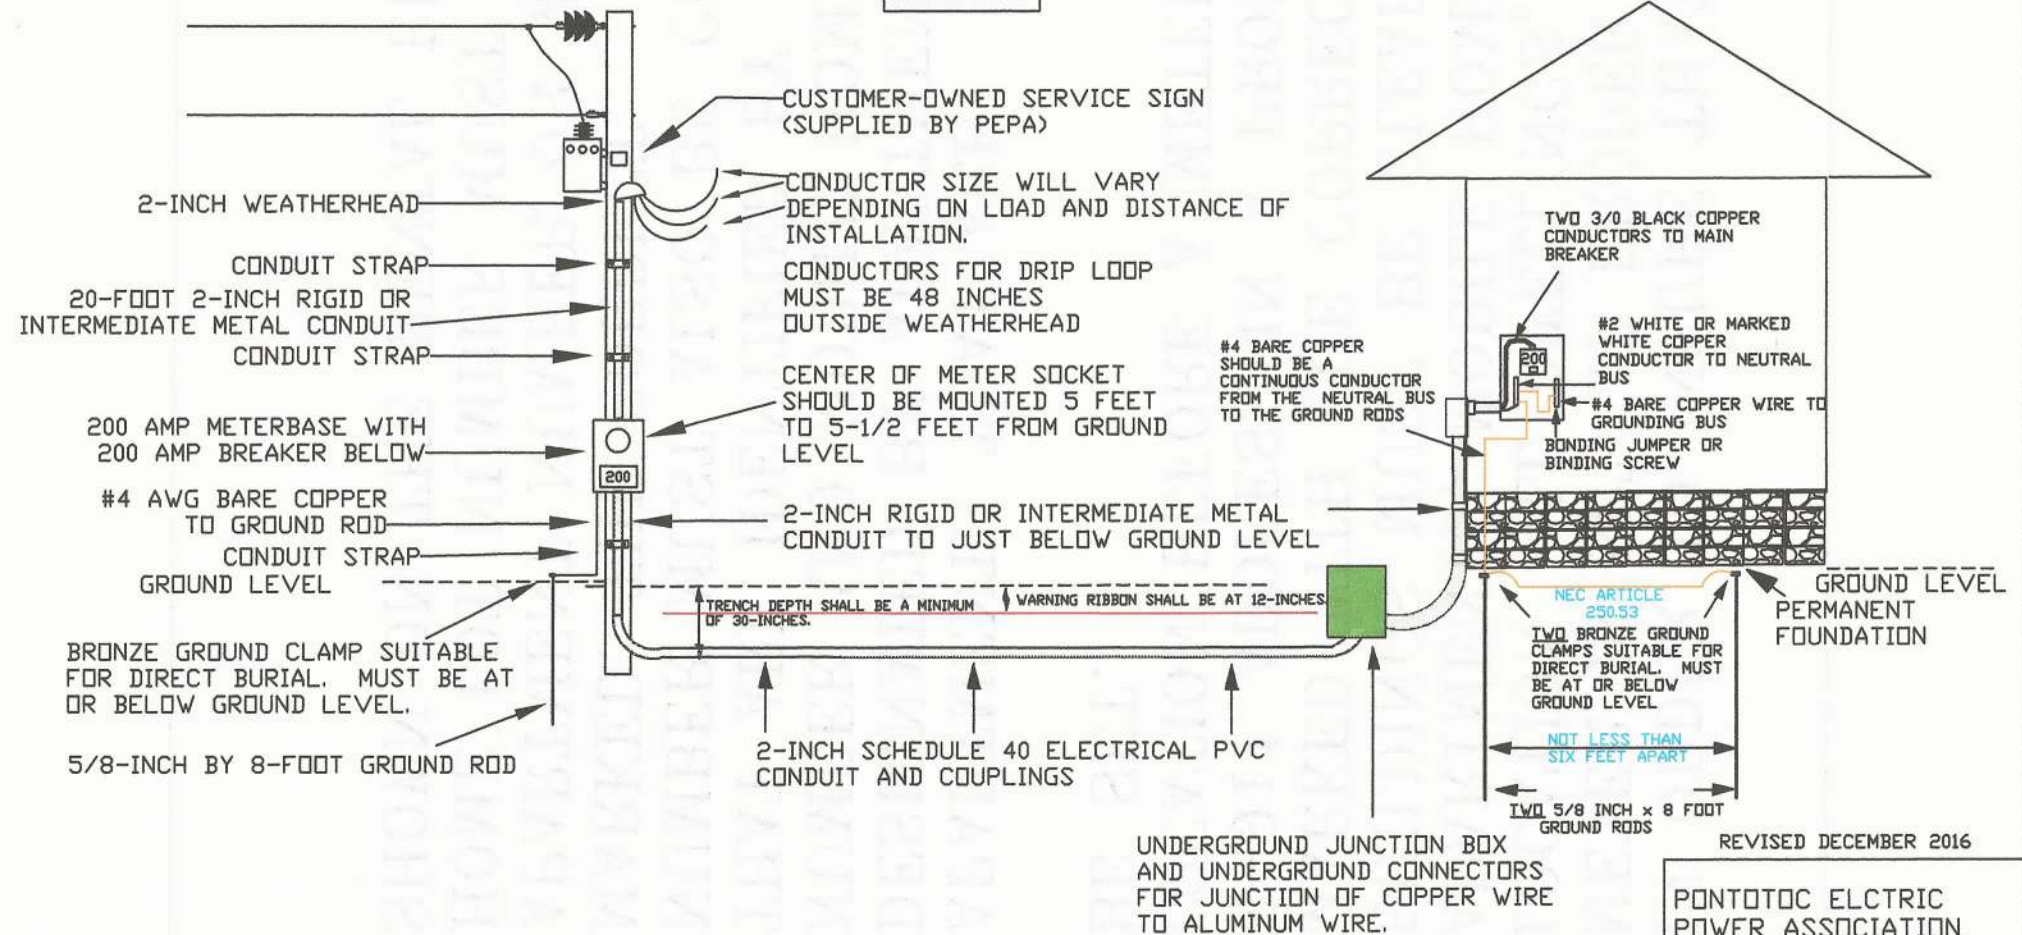

200 AMP PANEL LOCATION REQUIREMENTS

1. THE SERVICE DISCONNECTING MEANS SHALL BE INSTALLED AT A READILY ACCESSIBLE LOCATION.
2. THE SERVICE DISCONNECTING MEANS SHALL NOT BE INSTALLED IN BATHROOMS.



SEE BACK SIDE OF SHEET FOR OTHER INSTRUCTIONS AND REQUIREMENTS

IN ORDER TO INSURE THAT THE METER IS SET AT PROPER LOCATION, ALL DWELLINGS, APARTMENTS, MOBILE HOMES AND BUILDINGS MUST BE CLEARLY MARKED WITH THE CORRECT E-911 ADDRESS IN A PROMINENT LOCATION BEFORE A METER WILL BE SET.

APARTMENTS THAT ARE DESIGNATED BY APARTMENT NUMBER AND MOBILE HOME PARKS THAT ARE IDENTIFIED BY LOT NUMBER MUST ALSO BE CLEARLY MARKED. THE CORRECT APARTMENT NUMBER OR MOBILE HOME LOT NUMBER MUST BE SHOWN ON THE RENTAL RECEIPT.